

Table 2 - System Requirement /Tabla 2 - Requisito del sistema/ Tableau 2 - Exigences du système

Table with 4 columns: Component/Componente/Composant, EN/IRAM/NBR, USA, Canada. Rows include Anchoorage connector standard, Harness Standard, Connectors Standard, and Structure Strength.

Table 3 - System use and periodic examination /Tabla 3 - Comprobaciones previas al uso y examen periódico/ Tableau 3 - Contrôles avant utilisation et vérification périodique

Table with 4 columns: Pre-use checks, Completed prior to each use, Comprobaciones previas al uso, Realizadas antes de cada uso, Contrôles avant utilisation, Réalisés avant chaque utilisation.


Table 4 - Components /Tabla 4 - Materiales/ Tableau 4 - Composants

Table with 4 columns: Component, Material, Componente, Material. Rows include Case, Drum, Chassis, Lifeline, Connectors, and Carcasa.

Table 5 - Materials /Tabla 5 - Materiales/ Tableau 5 - Matériaux


Table with 4 columns: Component, Material, Componente, Material. Rows include Case, Drum, Chassis, Lifeline, Connectors, Carcasa, Tambor, and Chasis.

MSA V-TEC® Personal Fall Limiter (PFL) User Instructions. Includes diagrams of the device and regulatory information.

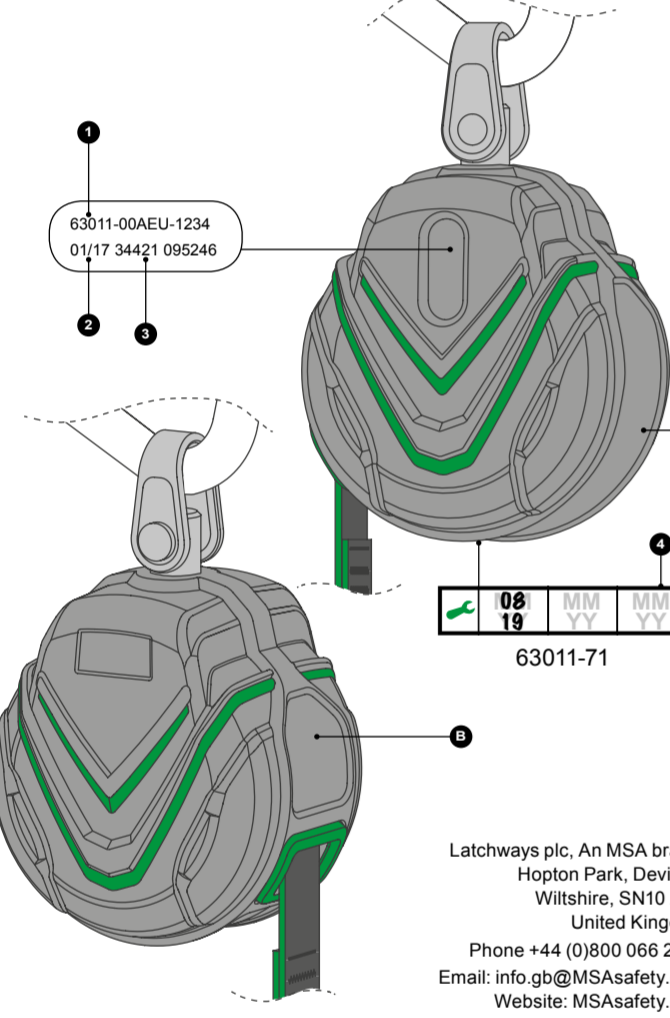

Product labels for the PFL, including CE marking, ANSI OSHA OSHA/IRAM/NBR, and various warning symbols.

Product labels for Mini PFL and PFL 3m (10 ft) variants, including CE marking and various warning symbols.

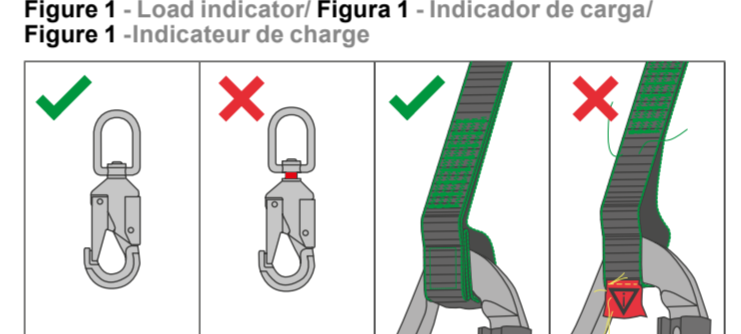

Product Marking/Marcado del producto/Marquage du produit. Table with 3 columns: EN, ES, FR. Lists model number, date of manufacture, serial number, etc.

Table 1 - Acceptable anchor locations /Tabla 1 - Ubicaciones aceptables para el anclaje/ Tableau 1 - Points d'ancrage acceptables. Table with 3 columns: Component, Material, Componente, Material. Includes a diagram of anchor locations.

Certificate of Conformity / Certificado de conformidad / Certificat de conformité. Includes text in three languages and a 'PLACE STICKER HERE' area.

Table 6/Tabla 6/Tableau 6 MSA V-TEC® TwinLink. Instructions for using TwinLink connectors, including diagrams and multilingual text.

EN section of V-TEC TwinLink instructions. Text describing the use and installation of the TwinLink system.

ES section of V-TEC TwinLink instructions. Text describing the use and installation of the TwinLink system.

FR section of V-TEC TwinLink instructions. Text describing the use and installation of the TwinLink system.

